


datavideo

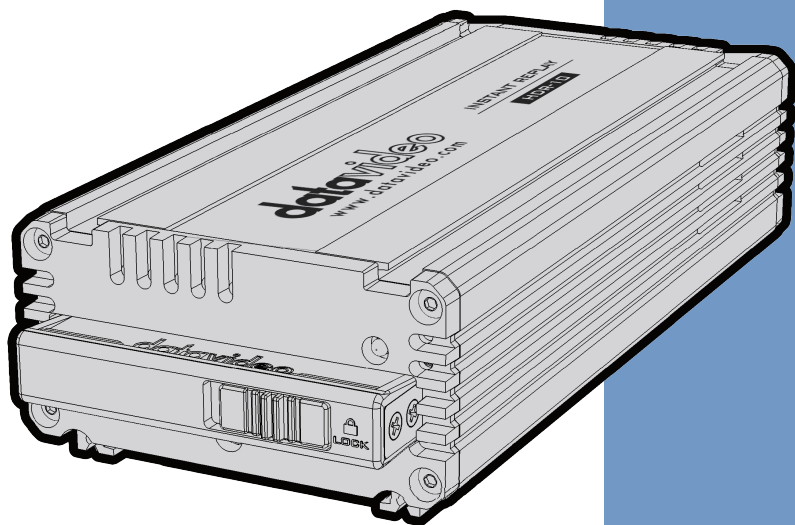

INSTANT REPLAY

HDR-10

Instruction Manual

www.datavideo.com

Table of Contents

FCC COMPLIANCE STATEMENT	4
WARNINGS AND PRECAUTIONS	4
WARRANTY	5
STANDARD WARRANTY	5
THREE YEAR WARRANTY	6
DISPOSAL	6
1. INTRODUCTION	7
2. FEATURES	7
3. FUNCTIONS	7
FRONT PANEL	7
REAR PANEL	8
4. QUICK OPERATION INSTRUCTION	9
4.1 CAPTURE MODE.....	10
4.2 REVIEW MODE.....	11
<i>Saving an edited clip or highlight to MOV file</i>	12
4.3 REPLAY MODE	12
<i>Capture and Replay</i>	13
<i>Recalling a previously saved Clip</i>	13
4.4 HOME MODE	13
5. RMC-400 REPLAY CONTROL CENTER	16
5.1 REAR PANEL.....	16
5.2 CONTROL PANEL.....	17
5.3 HOW TO PURCHASE	19
6. FIRMWARE UPGRADE	20
7. FORMATTING STORAGE MEDIA	21
8. SPECIFICATIONS	22
9. SERVICE AND SUPPORT	24

Disclaimer of Product & Services

The information offered in this instruction manual is intended as a guide only. At all times, Datavideo Technologies will try to give correct, complete and suitable information. However, Datavideo Technologies cannot exclude that some information in this manual, from time to time, may not be correct or may be incomplete. This manual may contain typing errors, omissions or

incorrect information. Datavideo Technologies always recommend that you double check the information in this document for accuracy before making any purchase decision or using the product. Datavideo Technologies is not responsible for any omissions or errors, or for any subsequent loss or damage caused by using the information contained within this manual. Further advice on the content of this manual or on the product can be obtained by contacting your local Datavideo Office or dealer.

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warnings and Precautions



1. Read all of these warnings and save them for later reference.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit in or near water.
5. Do not place this unit on an unstable cart, stand, or table. The unit may fall, causing serious damage.
6. Slots and openings on the cabinet top, back, and bottom are provided for ventilation. To ensure safe and reliable operation of this unit, and to protect it from overheating, do not block or cover these openings. Do not place this unit on a bed, sofa, rug, or similar surface, as the ventilation openings on the bottom of the cabinet will be blocked. This unit should never be placed near or over a heat register or radiator. This unit should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should only be operated from the type of power source indicated on the marking label of the AC adapter. If you are not sure of the type of power available, consult your Datavideo dealer or your local power company.
8. Do not allow anything to rest on the power cord. Do not locate this unit where the power cord will be walked on, rolled over, or otherwise stressed.
9. If an extension cord must be used with this unit, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord's rating.
10. Make sure that the total amperes of all the units that are plugged into a single wall outlet do not exceed 15 amperes.
11. Never push objects of any kind into this unit through the cabinet ventilation slots, as they may touch dangerous voltage points or short out parts that could result in risk of fire or electric shock. Never spill liquid of any kind onto or into this unit.
12. Except as specifically explained elsewhere in this manual, do not attempt to service this product yourself. Opening or removing covers that are marked "Do Not Remove" may expose you to dangerous voltage points or

other risks, and will void your warranty. Refer all service issues to qualified service personnel.

13. Unplug this product from the wall outlet and refer to qualified service personnel under the following conditions:
 - a. When the power cord is damaged or frayed;
 - b. When liquid has spilled into the unit;
 - c. When the product has been exposed to rain or water;
 - d. When the product does not operate normally under normal operating conditions. Adjust only those controls that are covered by the operating instructions in this manual; improper adjustment of other controls may result in damage to the unit and may often require extensive work by a qualified technician to restore the unit to normal operation;
 - e. When the product has been dropped or the cabinet has been damaged;
 - f. When the product exhibits a distinct change in performance, indicating a need for service.

Warranty

Standard Warranty

- Datavideo equipment are guaranteed against any manufacturing defects for one year from the date of purchase.
- The original purchase invoice or other documentary evidence should be supplied at the time of any request for repair under warranty.
- The product warranty period begins on the purchase date. If the purchase date is unknown, the product warranty period begins on the thirtieth day after shipment from a Datavideo office.
- All non-Datavideo manufactured products (product without Datavideo logo) have only one year warranty from the date of purchase.
- Damage caused by accident, misuse, unauthorized repairs, sand, grit or water is not covered under warranty.
- Viruses and malware infections on the computer systems are not covered under warranty.
- Any errors that are caused by unauthorized third-party software installations, which are not required by our computer systems, are not covered under warranty.
- All mail or transportation costs including insurance are at the expense of the owner.
- All other claims of any nature are not covered.
- All accessories including headphones, cables, and batteries are not covered under warranty.


- Warranty only valid in the country or region of purchase.
- Your statutory rights are not affected.

Three Year Warranty

- All Datavideo products purchased after July 1st, 2017 are qualified for a free two years extension to the standard warranty, providing the product is registered with Datavideo within 30 days of purchase.
- Certain parts with limited lifetime expectancy such as LCD panels, DVD drives, Hard Drive, Solid State Drive, SD Card, USB Thumb Drive, Lighting, Camera module, PCIe Card are covered for 1 year.
- The three-year warranty must be registered on Datavideo's official website or with your local Datavideo office or one of its authorized distributors within 30 days of purchase.



Disposal

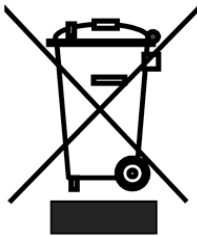

For EU Customers only - WEEE Marking

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



CE Marking is the symbol as shown on the left of this page. The letters "CE" are the abbreviation of French phrase "Conformité Européene" which literally means "European Conformity". The term initially used was "EC Mark" and it was officially replaced by "CE Marking" in the Directive 93/68/EEC in 1993. "CE Marking" is now used in all EU official documents.

1. Introduction

The HDR-10 is a Highlight Replay Recorder (3G/HD/SD SDI) capable of capturing specific, desired or special scenes during any sports game. The captured scene is then output to the switcher as a replay. The HDR-10 also allows the user to store the chosen Highlights into removable compatible media (2.5" SSD recommended). The User controls the unit with a simple USB 2.0 compatible Jog/Shuttle wheel which has five function buttons. An SDI AUX video output from the HDR-10 unit provides an On Screen Display (OSD) menu and the PGM SDI output provides clean video output.


Note: The HDR-10 3G input accepts video signals from Level A camera only.

2. Features

- Single channel highlight replay recorder
- Internal 4GB Buffer to capture and review the event
- 3G/HD/SD SDI input, output and loop through with embedded audio
- A third party Jog/Shuttle control device is provided with the unit
- GPI interface allows other devices such as switcher to trigger the playback.
- Recording file formats: Uncompressed 4:2:2 MOV
- LISN (Local Interconnect Synchronous Network) connection between main unit, remote controller and other devices.


3. Functions

Front Panel

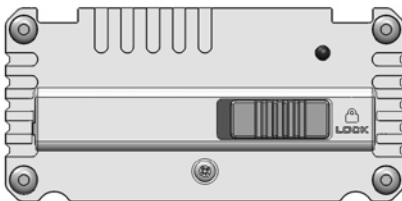

Media Locking Switch


Rear Panel

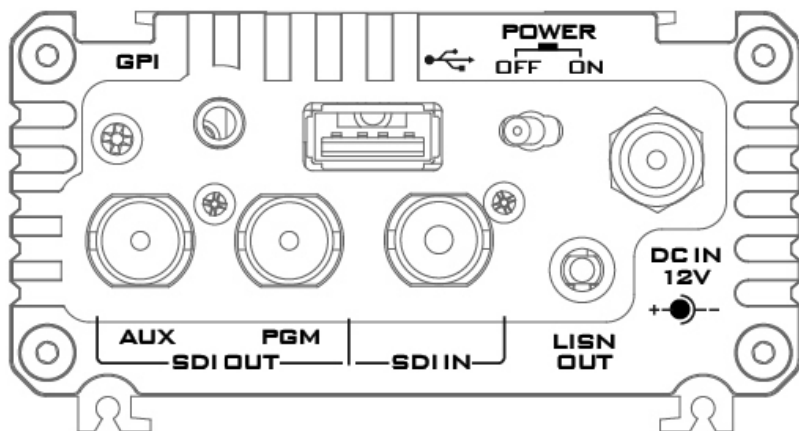

DC In Socket (12V)



 ON/OFF Switch



USB 2.0 port for Control or Updates



External GPI Trigger



AUX OUT



PGM OUT



SDI IN

4. Quick Operation Instruction

To operate the HDR-10, the user needs to be familiar with the supplied **Contour Shuttle Express** USB 2.0 controller. When viewing the HDR-10 AUX SDI output, relevant controller buttons or wheels are annotated as an OSD menu in the lower left hand corner of the video with a number or icon assigned to each. This OSD menu is not shown on the separate PGM SDI output.



There are four modes of operation within the HDR-10, three main modes and a menu driven maintenance mode. **The three main modes follow the normal operation sequence of the HDR-10.**

These are, in order:

- 1. Capture Mode** Where live action is monitored and a potential highlight is flagged.
- 2. Review Mode** Where a highlight is precisely edited and can be also saved.

3. Replay Mode Where the selected highlight is replayed on the PGM OUT port.

In these three modes, dedicated keys are provided for quick access and control. As a reminder, the function of each button or wheel is then annotated in the lower left hand corner of the AUX screen.


Maintenance mode Accessed from the **HOME menu option** and is menu driven.

4.1 Capture Mode

The HDR-10 automatically enters this mode when it is first powered on and this mode can also be selected from the OSD Home menu by the user.

In capture mode video is buffered or saved to working memory only. This memory is depicted by a growing **red buffer line** at the bottom of the AUX OSD display.

This memory buffer will only store up to the latest 30 seconds of video. Once the buffer memory is full the line stops growing and the HDR-10 starts recycling memory or buffer space. During this recycle process the oldest video frames captured are lost in order to save the latest video data being supplied to the HDR-10.












	2	Drop start cue sets the start point of a particular replay clip
EXIT	5	Exit highlight Capture mode and enter Review mode

When the user presses button 2 on the Jog/Shuttle controller, a start flag or box is shown progressing along the red buffer line. This marks the beginning of a possible video highlight to be replayed. When the user decides enough video has been captured for the highlight clip button 5 is pressed to end capture mode and the unit automatically enters Review Mode.

4.2 Review Mode


The HDR-10 automatically enters this mode when capture mode is exited. This mode can also be selected from the OSD Home menu by the user. **In review mode** the buffer line has changed colour to a **green buffer line** to quickly confirm the mode has changed.

The clip marked between the start and exit buttons being pressed in capture mode can now be reviewed, edited further or saved to the removable SSD media as an uncompressed .MOV file.

	1	Save the currently marked clip, between the Start and End points, as an uncompressed MOV file to the removable SSD media.
 	2	Drop Start Cue marker at current position Go to Start Cue marker
	3	Toggles the unit between Drop Marker or Go To marker mode
 	4	Drop End Cue marker at current position Go to End Cue marker
 		Jog (inside wheel) : Frame-By-Frame fine tune
 		Shuttle (outside wheel): Fast forward or rewind at 1x, 2x or 4x speed
	5	Exit the Review mode and move to Replay mode

Saving an edited clip or highlight to MOV file


The HDR-10 only saves the marked clip/highlight on the buffer line to the removable SSD as an uncompressed MOV file. The file size will be large, up to 4GB, depending on the clip length in seconds. The saved clip can be replayed from the unit at a later stage or added (appended) to other clips on the same SSD. The SSD removed from the HDR-10 can also be used to transfer saved clips to a non-linear editing computer.

1. Power on the HDR-10 and by default, the HDR-10 will be in the capture mode.
2. Press the No. 2 control button to place the start cue
3. To stop capturing, press the No. 5 control button (EXIT) and enter the Review Mode
4. In Review Mode, use jog and shuttle wheels to adjust the cursor position and once the cursor is at desired position, replace the start cue and/or the end cue.
5. Press the No. 1 control button () to save after the start and end points are determined.

4.3 Replay Mode

The HDR-10 automatically enters this mode when review mode is exited. This mode can also be selected from the OSD Home menu by the user.

In replay mode the buffer line has also changed colour to **blue** to quickly confirm the mode has changed.

	1	Play the replay clip
Repeat	2	Repeat the replay clip for unlimited counts until the button is pressed again
Ext/Int T	3	Switches between GPI trigger or Contour Shuttle Express controller trigger
Speed	↓↑	Change play speed
Exit	5	Exit the Replay mode and move to the Home menu

Capture and Replay

1. Power on the HDR-10 and by default, the HDR-10 will be in the capture mode.
2. The HDR-10 will start capturing once it is in the capture mode.
3. Press the No. 2 controller button to place the start cue.
4. To stop capturing, press the No. 5 controller button (EXIT) to enter the Review Mode.
5. In the Review Mode, use jog and shuttle wheels to adjust the cursor position and once the cursor is at desired position, place the start cue or the end cue.
6. Press the No. 2 controller button to place the start cue and press the No. 4 controller button to place the end cue.
7. Press the No. 5 controller button to exit the Review Mode after the start and end points are determined.
8. Go to the Replay Mode.
9. To start the replay, simply press the No. 1 controller button (▶)


Recalling a previously saved Clip

1. On the home mode menu, select Media.
2. To select the desired bin number, select “**SELECT BIN**” on the Media Sub-Menu.
3. After the bin number is selected, select the “**Recall Clip**” option to load the desired clip.
4. Select “**SELECT CLIP**” to start clip selection, which can be done by using the jog wheel to cycle through the available clip numbers.
5. After the desired clip is selected, the user can either clear the memory buffer content and load the selected clip (Clear and Recall) or append the selected clip to the existing buffer content (Recall Append).
6. After the clip is loaded, exit the Media Sub-Menu back to the Home Mode and then select the Replay Mode.
7. To start the clip replay, simply press the No. 1 controller button (▶)

4.4 Home Mode

After entering the Home menu, the menu options can be seen at the top center of the AUX output OSD. The relevant controls are annotated in the lower left hand corner of the AUX screen. The small inside wheel on

the jog/shuttle controller allows the user to scroll up/down the Home menu. To make the selection, simply press the No. 1 control button on the controller.

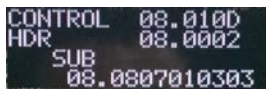Capture	Capture Mode	Refer to Capture Mode section		
Review	Review Mode	Refer to Review Mode section		
Replay	Replay Mode	Refer to Replay Mode section		
Media	Storage Media	Space Avail: Space available on HDR-10 Audio and Video formats (e.g. STEREO 1080i59.9)		
		Recall Clip	SELECT CLIP	
			CLEAR AND RECALL	
			RECALL APPEND	
		Select Bin		
		Mark Clip Bad	Yes/No	
		Empty Recent Bin	Yes/No	
		Format Media	Yes/No	
Save Clip				
Tools	System Tools	Video Format	720p50 720p59.9 720p60 1080i50 1080i59.9 1080i60 1080p50 1080p59.9 1080p60	
		Revision	CONTROL/HDR Versions 	
		Date & Time (YYYY-MM-DD HH:MM)	SET GMT	
			SET RTC	
		Time Code	SET SOURCE	

			SET TIMECODE
		Audio Setup	MONO
			STEREO
			QUAD
		Firmware Upgrade	

Currently selected option is indicated by an asterisk (*).


5. RMC-400 Replay Control Center

In addition to the standard Contour *Shuttle Express* USB 2.0 controller, the RMC-400 Replay Control Center is available separately for the user. The RMC-400 offers the user a powerful and effective way to control multiple HDR-10 highlight replay recorders.

The RMC-400 allows the user to control up to four HDR-10 units simultaneously. Moreover, the user can use the RMC-400 to capture their desired scenes during any live events such as sports game or live concert. After the desired scenes are captured, the user will be able to edit and replay the captured scenes directly on the RMC-400.

5.1 Rear Panel


The rear panel of the RMC-400 is illustrated in the diagram below.

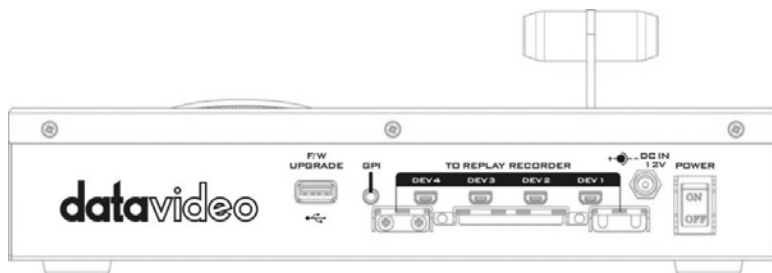

- **Power Switch:** The power switch allows you to turn ON/OFF the device.
- **DC IN 12V:** A 12V DC power adapter unit must be connected to the DC IN 12V socket.
- **Mini-USB interface:** Up to four HDR-10 Highlight Replay Recorders can be connected.
- **GPI interface:** The GPI interface can be used to connect other external devices.
- **Firmware Upgrade:** USB type A interface for firmware upgrade.

5.2 Control Panel

The control panel of the RMC-400 is illustrated in the diagram below.

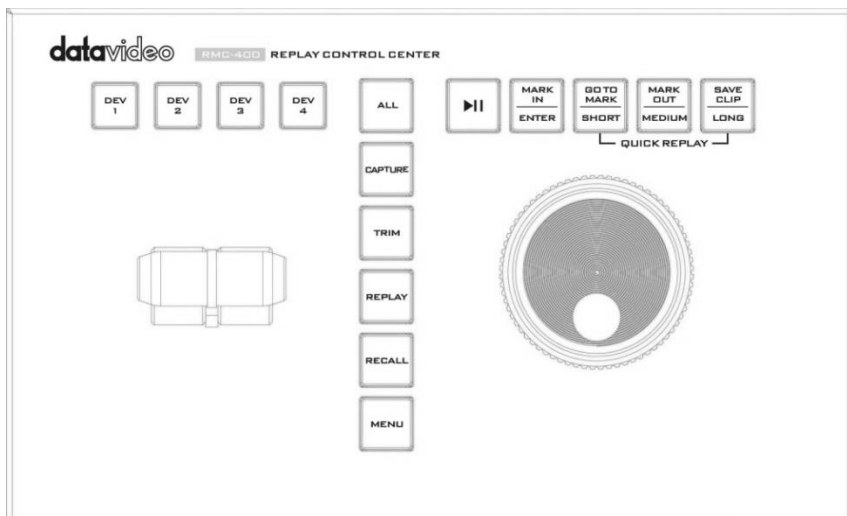

- **DEV1 to DEV4 Buttons:** “Dev” Buttons allow the user to activate the respective HDR-10 devices.
- **ALL Button:** Press the “ALL” button to activate all HDR-10 devices simultaneously.
- **CAPTURE Button:** Press the “CAPTURE” button to enter the **Capture** mode.
- **TRIM Button:** After desired scenes are captured, press the “TRIM” button to enter the **TRIM** mode for further editing.
- **REPLAY Button:** Press the “REPLAY” button to enter the **Replay** mode.
- **RECALL Button:** Press the “RECALL” button to enter the **RECALL** mode, which allows the user to retrieve a previous-saved clip for replay.

- **MENU Button:** Press the “**MENU**” button to open the on-screen menu.
- **Play/Pause Button:** In **Replay** and **TRIM** mode, press this button to start and pause the clip playback.
- **MARK IN/ENTER Button:** In **Capture** and **TRIM** modes, this button determines the start point of the clip. In **Replay** mode, this button is disabled. In **Recall** and **Menu** modes, this is an “**ENTER**” button that confirms a selection when pressed.
- **GO TO MARK/SHORT Button:** In **TRIM** mode, the “**GO TO MARK**” button toggles between **Go To Marker** and **Drop marker** mode. In **Replay** mode, this button is disabled. In **Capture** mode, the button (**SHORT**) acts as the hotkey for capturing short-length clip. For example, if the “**SHORT**” button is set to 3 seconds, then the latest 3 second video will be captured after the “**SHORT**” button is pressed.
- **MARK OUT/MEDIUM Button:** In **TRIM** mode, the “**MARK OUT**” button determines the end point of the clip. In **Replay** mode, this button is disabled. In **Capture** mode, the button (**MEDIUM**) acts as the hotkey for capturing a medium-length clip. For example, if the “**MEDIUM**” button is set to 5 seconds, then the latest 5 second video will be captured after the “**MEDIUM**” button is pressed.
- **SAVE CLIP/LONG Button:** In **TRIM** mode, the current captured clip will be saved after the “**SAVE CLIP**” button is pressed. In **Replay** mode, this button is disabled. In **Capture** mode, the button (**LONG**) acts as the hotkey for capturing a short-length clip. For example, if the “**LONG**” button is set to 14 seconds, then the latest 14 second video will be captured after the “**LONG**” button is pressed.
- **T-Bar:** T-Bar sets the playback speed of the Replay ranging from 0% to 400%. Push the T-Bar to determine the desired speed. When the replay is at its full speed, the T-Bar is at its resting position leaning away from the user. However, if the speed is at 0%, the T-Bar leans toward the user at its resting position.

- **Jog/Shuttle Knob:** When the video is paused in **TRIM** and **Replay** modes, use jog and shuttle wheels to adjust the cursor position. The shuttle wheel fast forwards or rewinds the cursor at 1x, 2x or 4x speed. The jog wheel fine tunes the cursor position. In **Recall** and **Menu** modes, the jog wheel can be used to browse the on-screen menu.

5.3 How to Purchase

The RMC-400 Replay Control Center is available for separate purchase. If the RMC-400 is of interest to you, please contact the local Datavideo sales representatives for more details.

6. Firmware Upgrade

Upgrading the Firmware involves upgrading the HDR-10 (Recorder) portion of the unit first and then the Controller portion of the unit.

Recorder portion:

1. Format the SSD drive within the HDR-10 and then connect the SSD to your computer.
2. Copy the supplied **flash.bin** file to the root directory of the SSD.
3. Safely eject the media from the computer and return the SSD to the HDR-10.
4. Go to the UPGRADE FIRMWARE option in the Home menu and follow OSD directions.

This process can take several minutes to complete, please be patient.

Controller portion:

1. Copy the supplied **update.bin** file to a USB Flash drive at the root directory.
2. Turn power to the HDR-10 unit OFF.
3. Disconnect the USB Jog/Shuttle Controller and connect the Flash Drive in its place.
4. Turn power to the HDR-10 unit ON and the unit will upgrade itself.
5. When finished, turn power OFF and return the Jog/Shuttle controller to the HDR-10.

This process can take several minutes to complete, please be patient.

7. Formatting Storage Media

Follow the procedure below to format SSD media in your HDR-10:

WARNING: Formatting the SSD will destroy any existing files already on the SSD. Back up any important files before formatting a previously used SSD in the HDR-10.

1. Go to Home menu.
2. Select Media → Format media.
3. A Format prompt screen will appear to ask for confirmation; select “Yes”
4. Formatting will progress until finished
5. System returns to media menu after formatting is completed.

8. Specifications

Descriptions		3G/HD Recorder, Player, Highlight Replay Recorder	
Housing Size		Standalone Type	
HDD Size		No size limitation	
Removable SSD / HDD		V	
File Format		MOV	
Connector	3G/HD-SDI Input	1	Level A
	3G/HD-SDI Output	2	One is programmable as loop-through or independent output
	LISN	1	Connection interface between main unit, remote controller and other devices
	USB	1	Connection with remote controller (Contour Shuttle Express controller)
	GPI	1	
	DC IN	1	
Video Format	HD	720P@50/59.94/60	
		1080i@50/59.94/60	
	3G (Level A Signal Only)	1080p@50/59.94/60	In Highlight Replay Recorder Mode only
Codec	Color Format	4:2:2	
	Uncompressed	10-bit or 8-bit	
Internal Buffer	Size (GB)	4	Standard memory module
	Channels	1 in and up to 2 out	
	Navigation	Slow Motion/ Normal Speed/ Fast Speed	
	Cues	2	Cue In and Cue Out, controlled by Controller
	Highlight	Records the clip marked by Cue In and Cue Out	

Note

Service & Support

It is our goal to make owning and using Datavideo products a satisfying experience. Our support staff is available to assist you to set up and operate your system. Contact your local office for specific support requests. Plus, please visit www.datavideo.com to access our FAQ section.

China Shanghai
Datavideo Technologies China Co
601, Building 10, No.1228,
Rd.Jiangchang,
Jingan District, Shanghai
Tel: +86 21-5603 6599
Fax: +86 21-5603 6770
E-mail: service@datavideo.cn

China Beijing
Datavideo Technologies China Co
No. 812, Building B, Wankai Center,
No.316, Wan Feng Road, Fengtai District,
Beijing, China
Tel: +86 10-8586 9034
Fax: +86 10-8586 9074
E-mail: service@datavideo.cn

China Chengdu
Datavideo Technologies China Co
B-823, Meinian square, No.1388,
Middle of Tianfu Avenue, Gaoxin District,
Chengdu, Sichuan
Tel: +86 28-8613 7786
Fax: +86 28-8513 6486
E-mail: service@datavideo.cn

China Fuzhou
Datavideo Technologies China Co
A1-2318-19 Room, No.8, Aojiang Road,
Tajiang District, Fuzhou, Fujian, China
Tel: 0591-83211756 + 0591-83210187
Fax: 0591-83211262
E-mail: service@datavideo.cn

China Jinan
Datavideo Technologies China Co
902, No. 1 business building,
Xiangtai Square, No. 129,
Yingxiongshan Road, Shizhong District,
Jinan City, Shandong Province, China
Tel: +86 531-8607 8813
E-mail: service@datavideo.cn

Hong Kong
Datavideo Hong Kong Ltd
G/F, 28 Cross Lane
Wanchai, Hong Kong
Tel: +852-2833-1981
Fax: +852-2833-9916
E-mail: info@datavideo.com.hk

India Noida
Datavideo India Noida
A-132, Sec-63, Noida-201307,
India
Tel: +91-0120-2427337
Fax: +91-0120-2427338
E-mail: sales@datavideo.in

India Kochi
Datavideo India Kochi
2nd Floor- North Wing, Govardhan Building,
Opp. NCC Group Headquarters, Chittoor Road,
Cochin- 682035
Tel: +91 4844-025336
Fax: +91 4844-047696
E-mail: sales@datavideo.in

Netherlands
Datavideo Technologies Europe BV
Floridadreef 106
3565 AM Utrecht,
The Netherlands
Tel: +31-30-261-96-56
Fax: +31-30-261-96-57
E-mail: info@datavideo.nl

Singapore
Datavideo Visual Technology(S) Pte Ltd
No. 178 Paya Lebar Road #06-07
Singapore 409030
Tel: +65-6749 6866
Fax: +65-6749 3266
E-mail: info@datavideovirtualset.com

Singapore
Datavideo Technologies (S) PTE Ltd
No. 178 Paya Lebar Road #06-03
Singapore 409030
Tel: +65-6749 6866
Fax: +65-6749 3266
E-mail: sales@datavideo.sg

Taiwan
Datavideo Technologies Co. Ltd
10F, No. 176, Jian 1st Rd., Chung Ho
District, New Taipei City 235, Taiwan
Tel: +886-2-8227-2888
Fax: +886-2-8227-2777
E-mail: service@datavideo.com.tw

United States
Datavideo Corporation
7048 Elmer Avenue,
Whittier, CA 90602,
U.S.A.
Tel: +1-562-696 2324
Fax: +1-562-696 6930
E-mail: sales@datavideo.com

United Kingdom
Datavideo UK Limited
Brookfield House, Brookfield Industrial
Estate, Peakdale Road, Glossop,
Derbyshire, SK13 6LQ
Tel: +44-1457 851 000
Fax: +44-1457 850 964
E-mail: sales@datavideo.co.uk

France
Datavideo France s.a.r.l.
Cité Descartes 1, rue Albert Einstein
Champs sur Marne 774477 –
Marne la Vallée cedex 2
Tel: +33-1-60370246
Fax: +33-1-60376732
E-mail: info@datavideo.fr



Please visit our website for latest manual update.

www.datavideo.com/product/HDR-10

datavideo

www.datavideo.com

All the trademarks are the properties of their respective owners. Datavideo Technologies Co., Ltd. All rights reserved 2018

Jan-30-2018

Version : E3